




origin
DOORS AND WINDOWS

Window to jamb coupler


Window to jamb coupler

Install the windows as described in the Origin Installation Guide


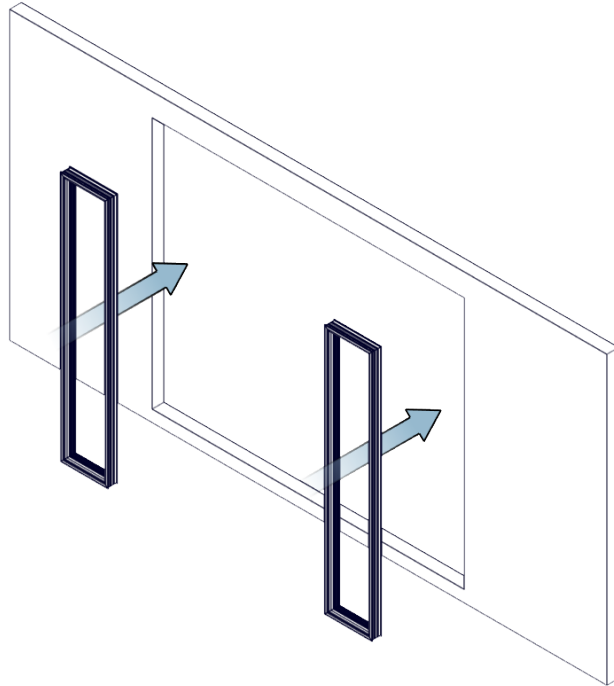


Ensure the remaining aperture is 6mm wider than the overall door set width

Do not install the glass

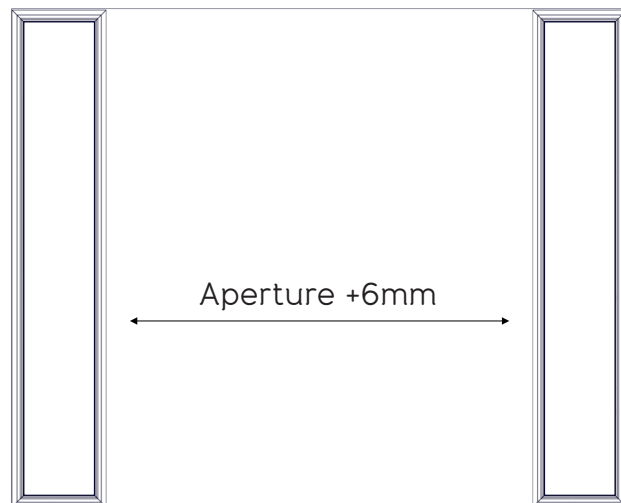

Install the alignment
block into the window
frame

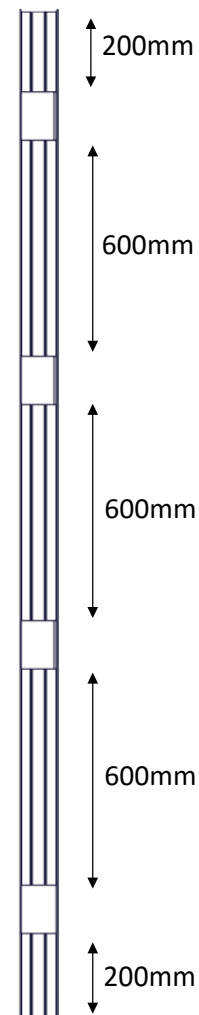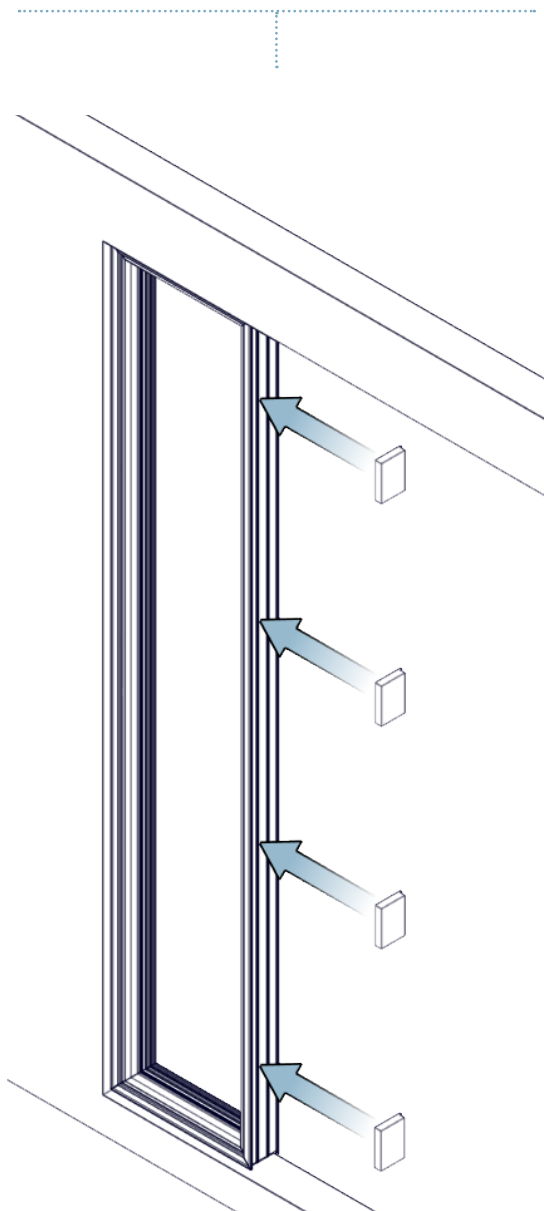



Leave 200mm
from each end and
evenly space the rest
appropriately

Window to jamb coupler


Drill, countersink and
fix alignment blocks



*Ensure screw is flush
with surface of the block*

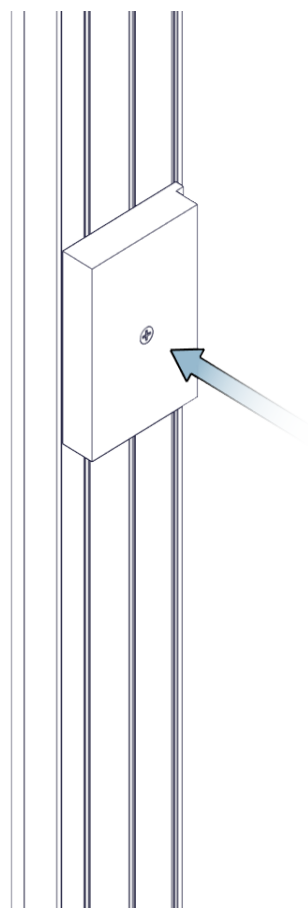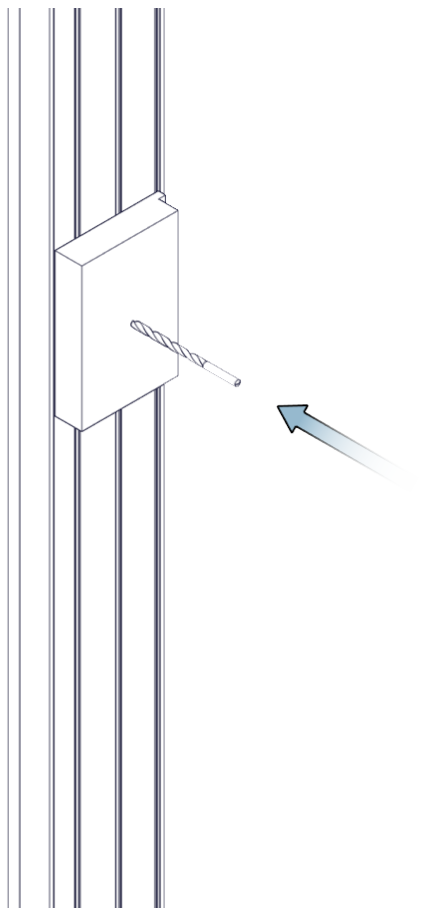


Cut down 5mm frame packers to
72mm (one for each jamb packer)

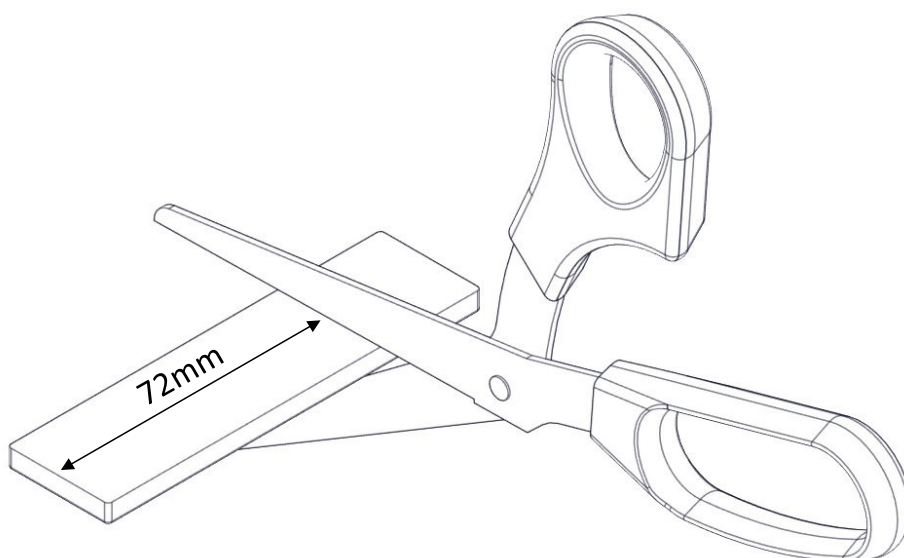



Window to jamb coupler

Install the Glazing Packers

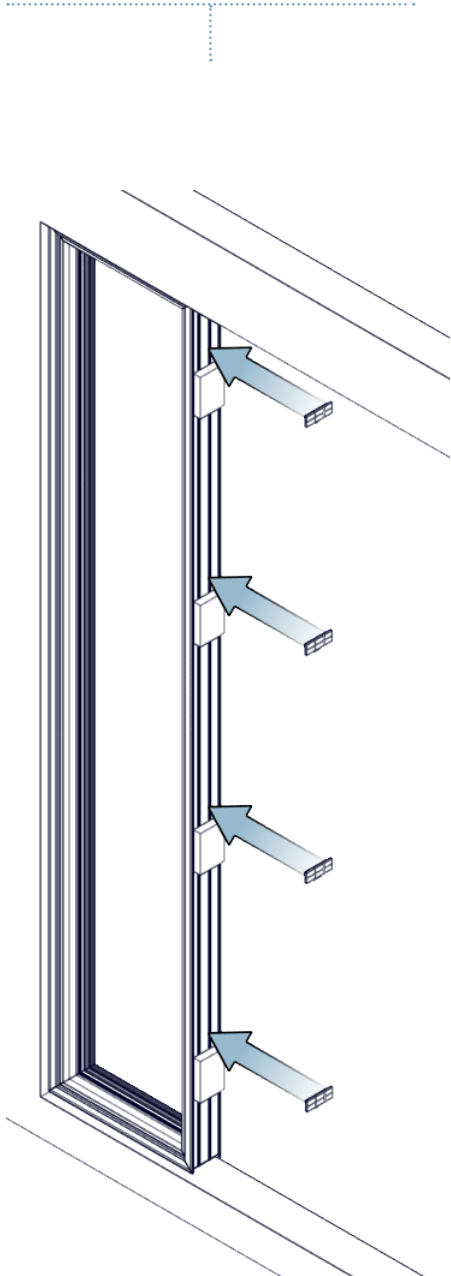

Ensure packers
are positioned
next to the
alignment blocks


Re-position the jamb packers in the jamb

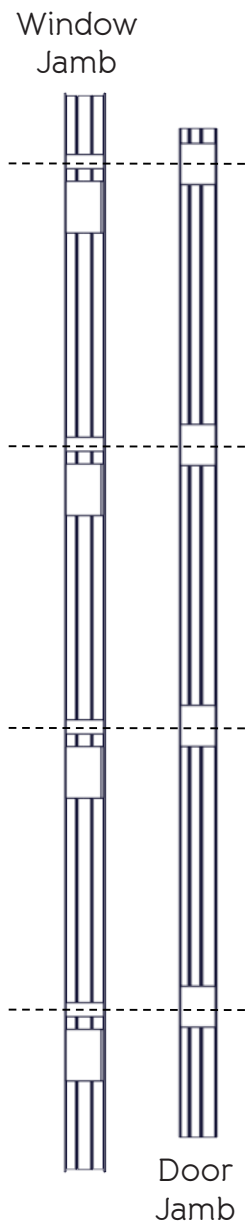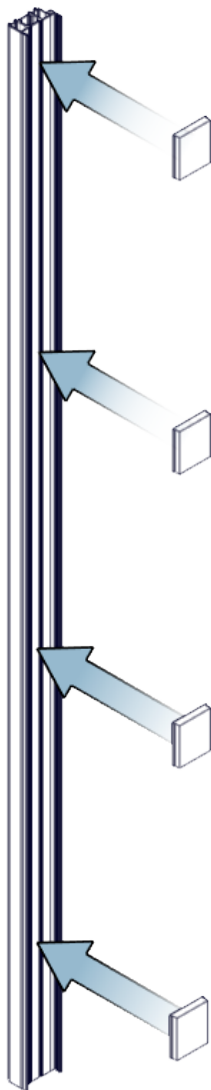

Ensure packers are spaced the same as the frame packers installed on the window frame and fix appropriately

Window to jamb coupler


Position the
door frame
into the
aperture
and pack/
clamp
accordingly

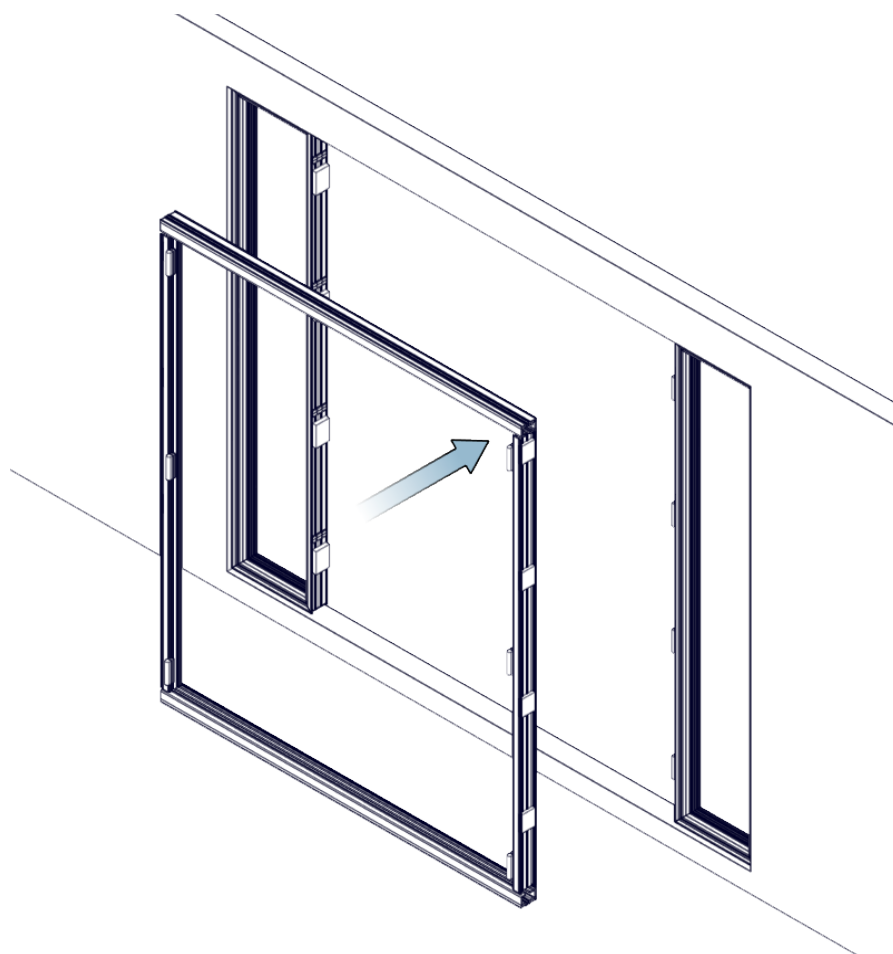




*Do not drill into
gasket chamber*

Pre-drill the
frame with a
3mm drill bit,
as shown,
for every
alignment
block used

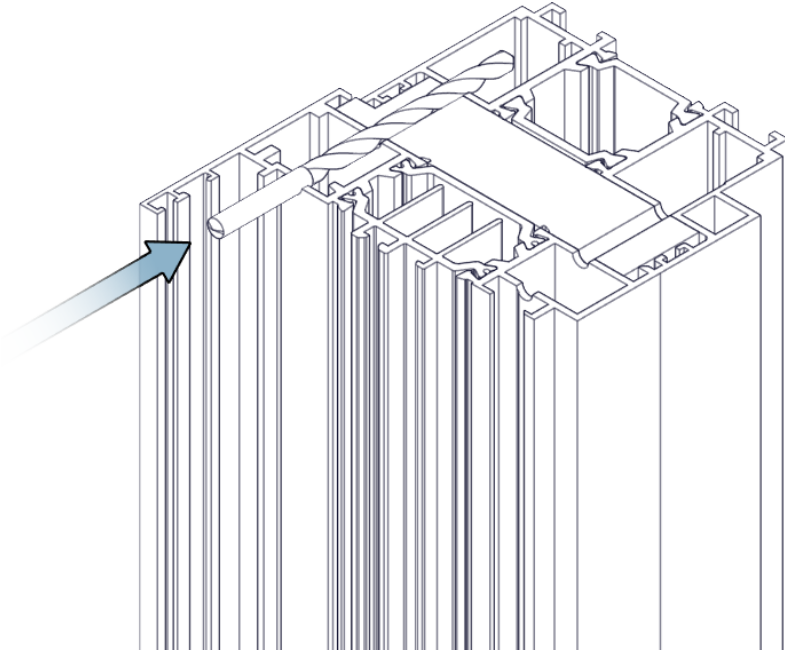


Using
supplied
screws, fix
the window
frame to the
door jamb

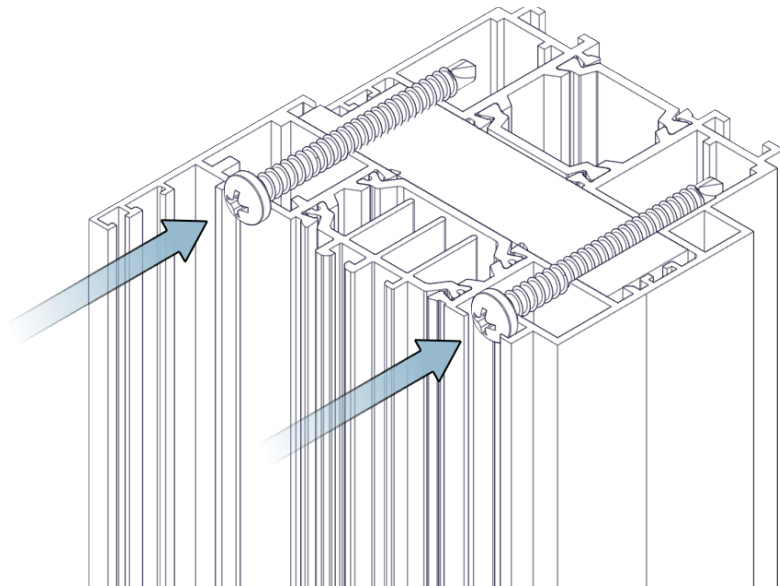


Window to jamb coupler


Install door sash, windows and glass as described in the Origin Installation Guide

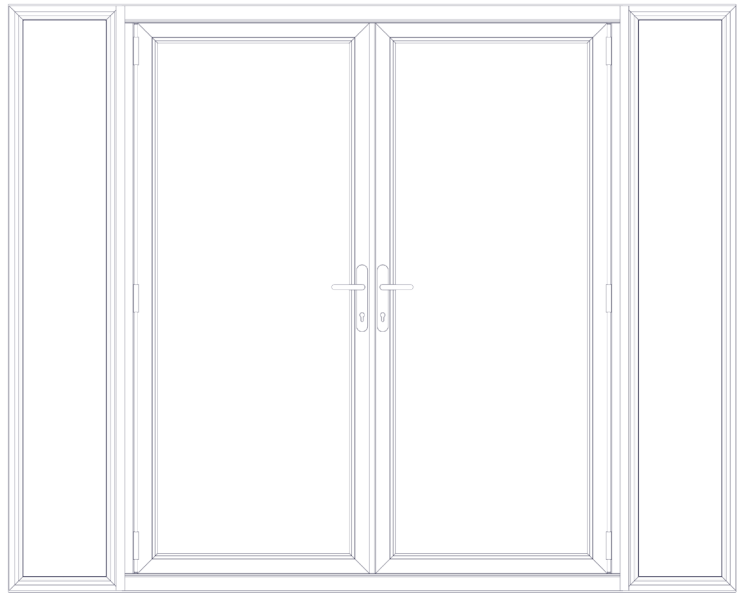

Seal the joint, between the window and door frame, making sure the joint is completely weather proof

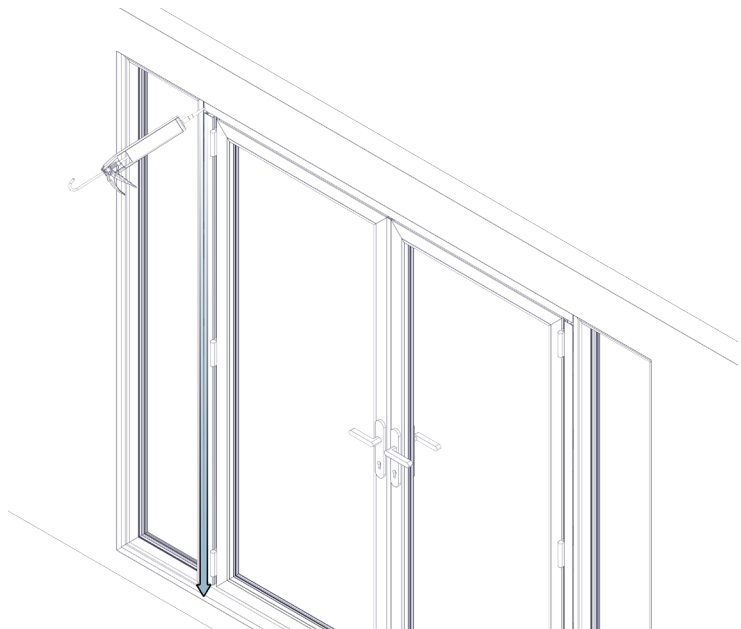

Cut and fit
supplied
trim inside
(flat) ...

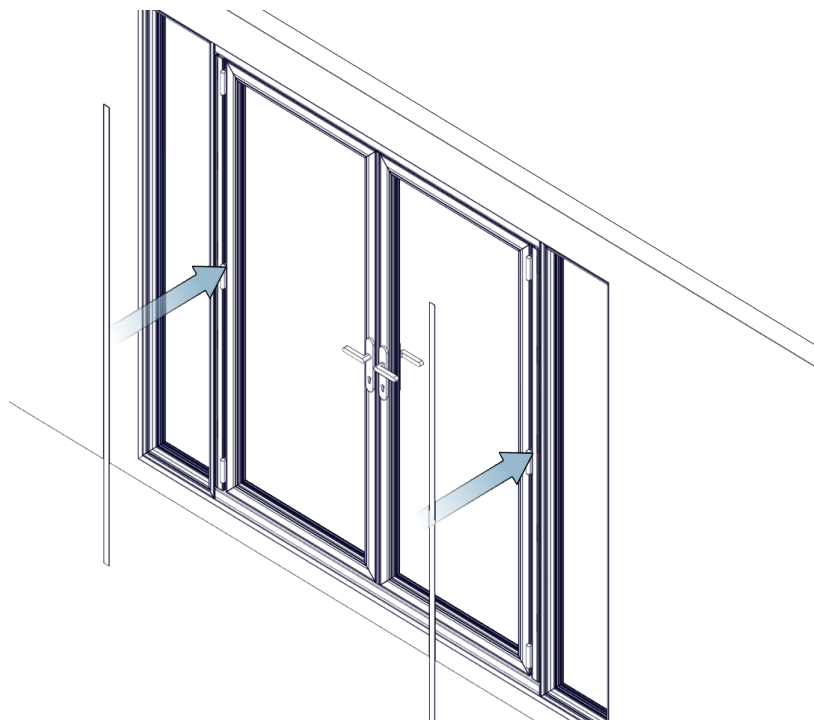

...and
out (stepped)

